


Mark center of door thickness for 1" (25mm) or 7/8" (22mm) hole, depending on latch housing diameter

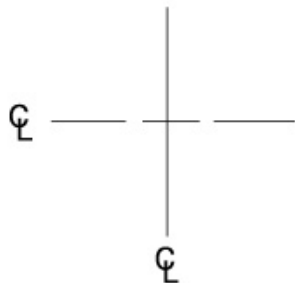

INSTALLATION TEMPLATE

Detach here



NOTE
Do not make the holes for locks without outside through-bolt type

2 3/4" (70mm) BACKSET

2 3/8" (60mm) BACKSET

IMPORTANT
For high bevel, place outside line at edge of door.
For flat doors, place center line at edge of door.
For low bevel, place inside line at edge of door.

MARK CENTER FOR 2 1/8" (54mm) HOLE

